
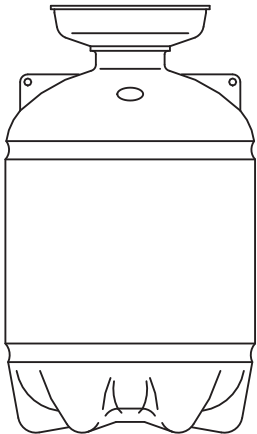
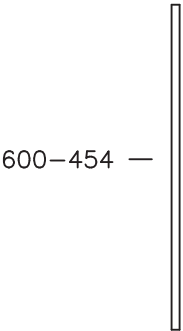
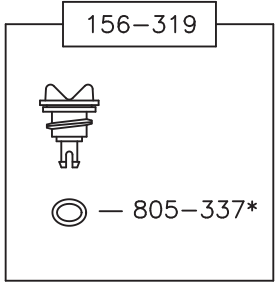
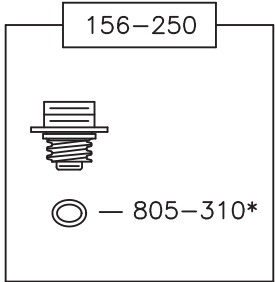
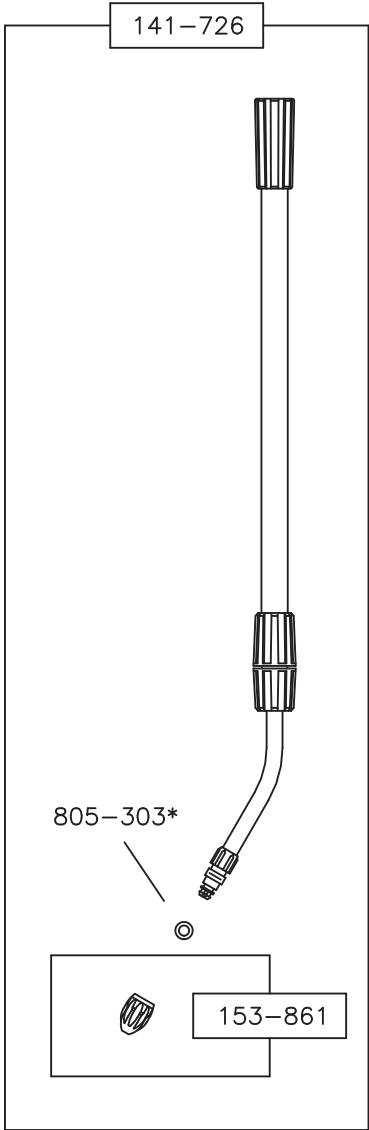
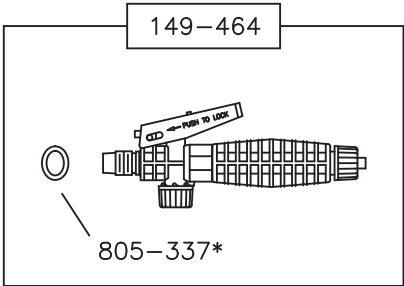
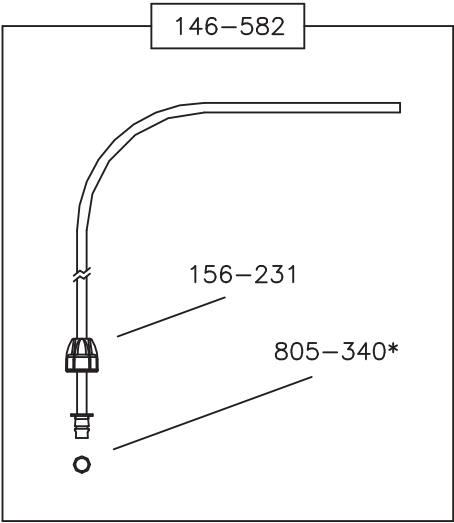



MAINTENANCE PARTS FOR HUDSON  
POLYETHYLENE BACK RELIEVER SPRAYER  
Model: 62191, 62192, 62193

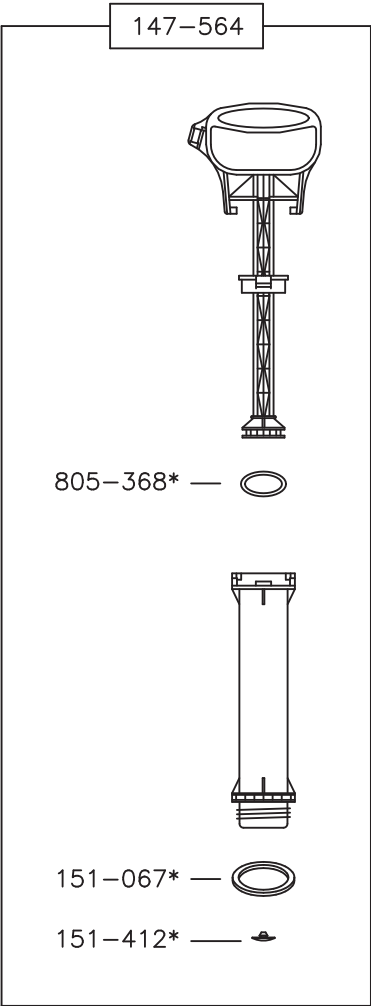

HUDSON®

H.D. HUDSON MANUFACTURING COMPANY  
500 North Michigan Avenue — Chicago IL 60611  
Phone: 800-523-9284 — FAX: 312-644-7989  
E-Mail: ladybug@hdhudson.com  
Website: www.hdhudson.com

## Hudson® Back Reliever™ 62192 Sprayer Pump

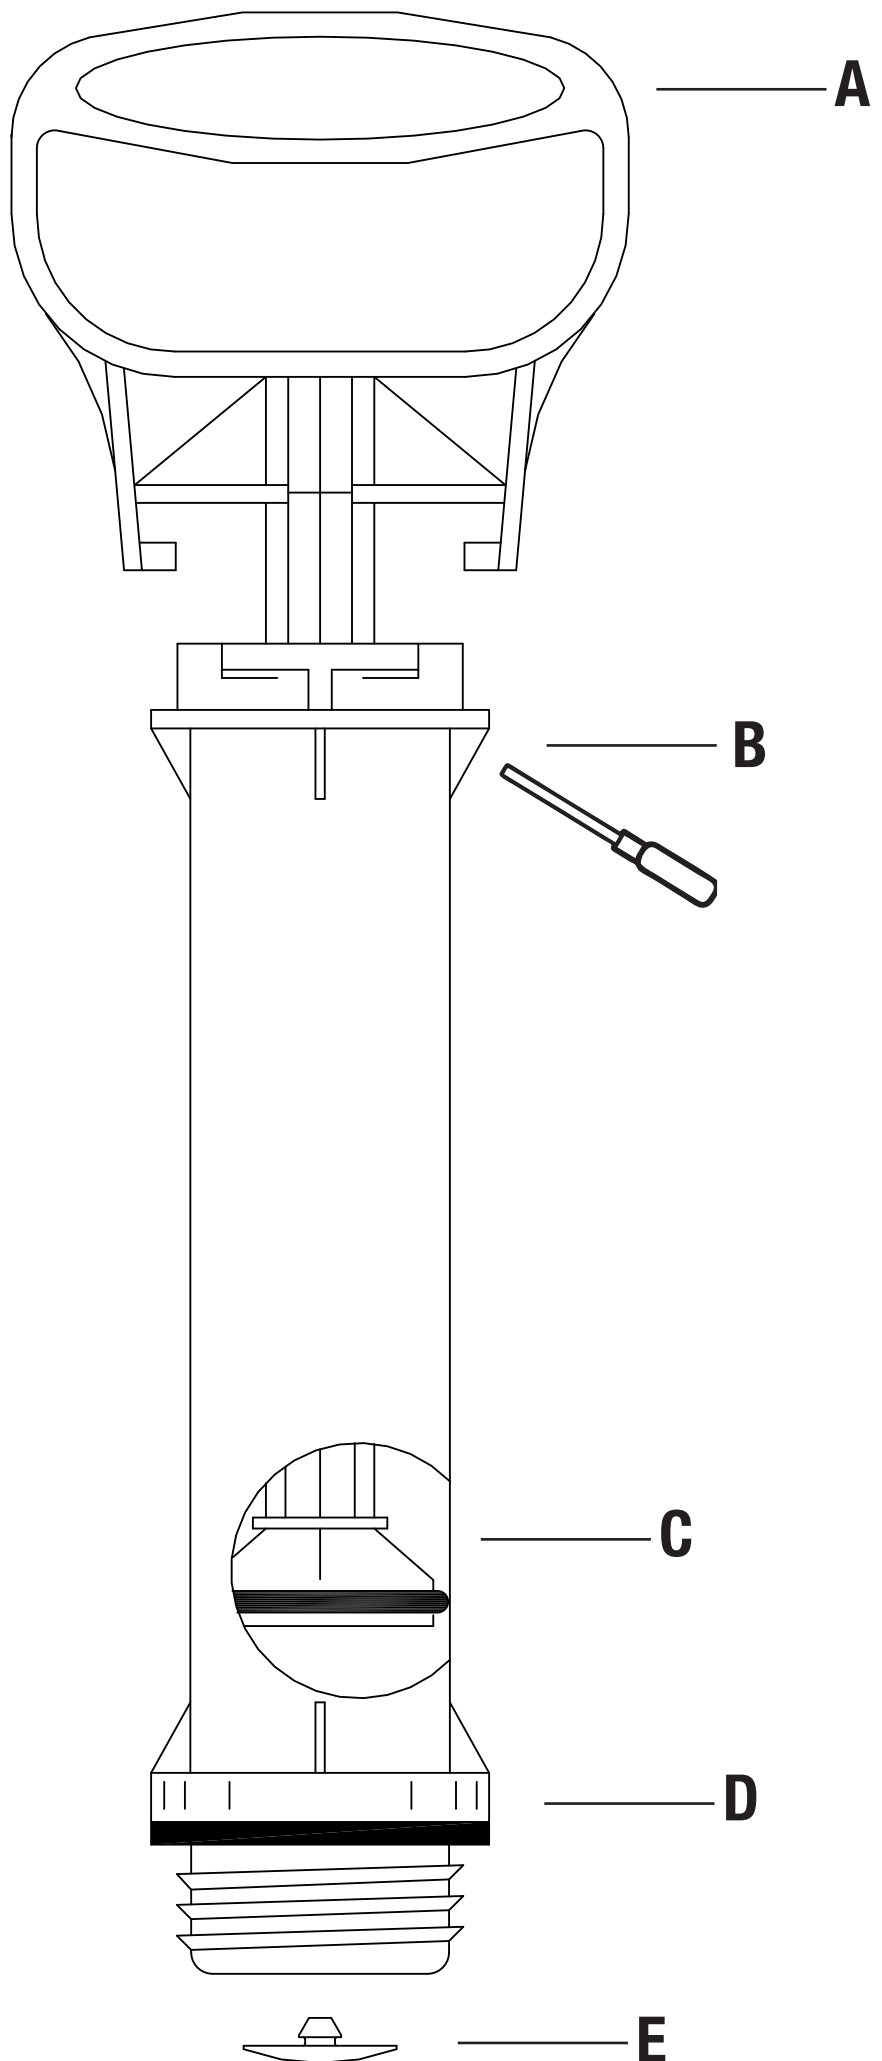

**If you have trouble pumping your sprayer,  
or if liquid gets inside pump:**

- A. Plunger assembly/pump handle
- B. Cylinder Assembly
- C. Plunger Cup
- D. Cylinder Gasket
- E. Pump Cylinder Check Valve

1. To open pump assembly: 1. Lift up (extend) plunger handle and rod from cylinder.
2. Lay pump on flat surface and hold securely.
3. Insert small screwdriver into slot in cylinder.
4. Push in and carefully push up to disengage locking tabs on collar. Do not use excessive force. Collar does not pop out. Work both slots. Pull up on plunger handle. Plunger will pull out and separate from cylinder if locking tabs on collar are disengaged.

### **If pump leaks at the tank opening:**

Clean or replace the cylinder gasket (D)

### **If pumping doesn't pressurize your sprayer:**

Lubricate the plunger cup (C) with petroleum jelly or replace. (You may need to do this if you do not use the sprayer for a prolonged time, especially over winter).

### **If pump won't pressurize and/or liquid gets into pump:**

Clean or replace the pump cylinder check valve (E).